


KitchenAid®**COOKTOP PARTS**

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

30" Free-Standing
DESIGNER STYLE
Convection Oven

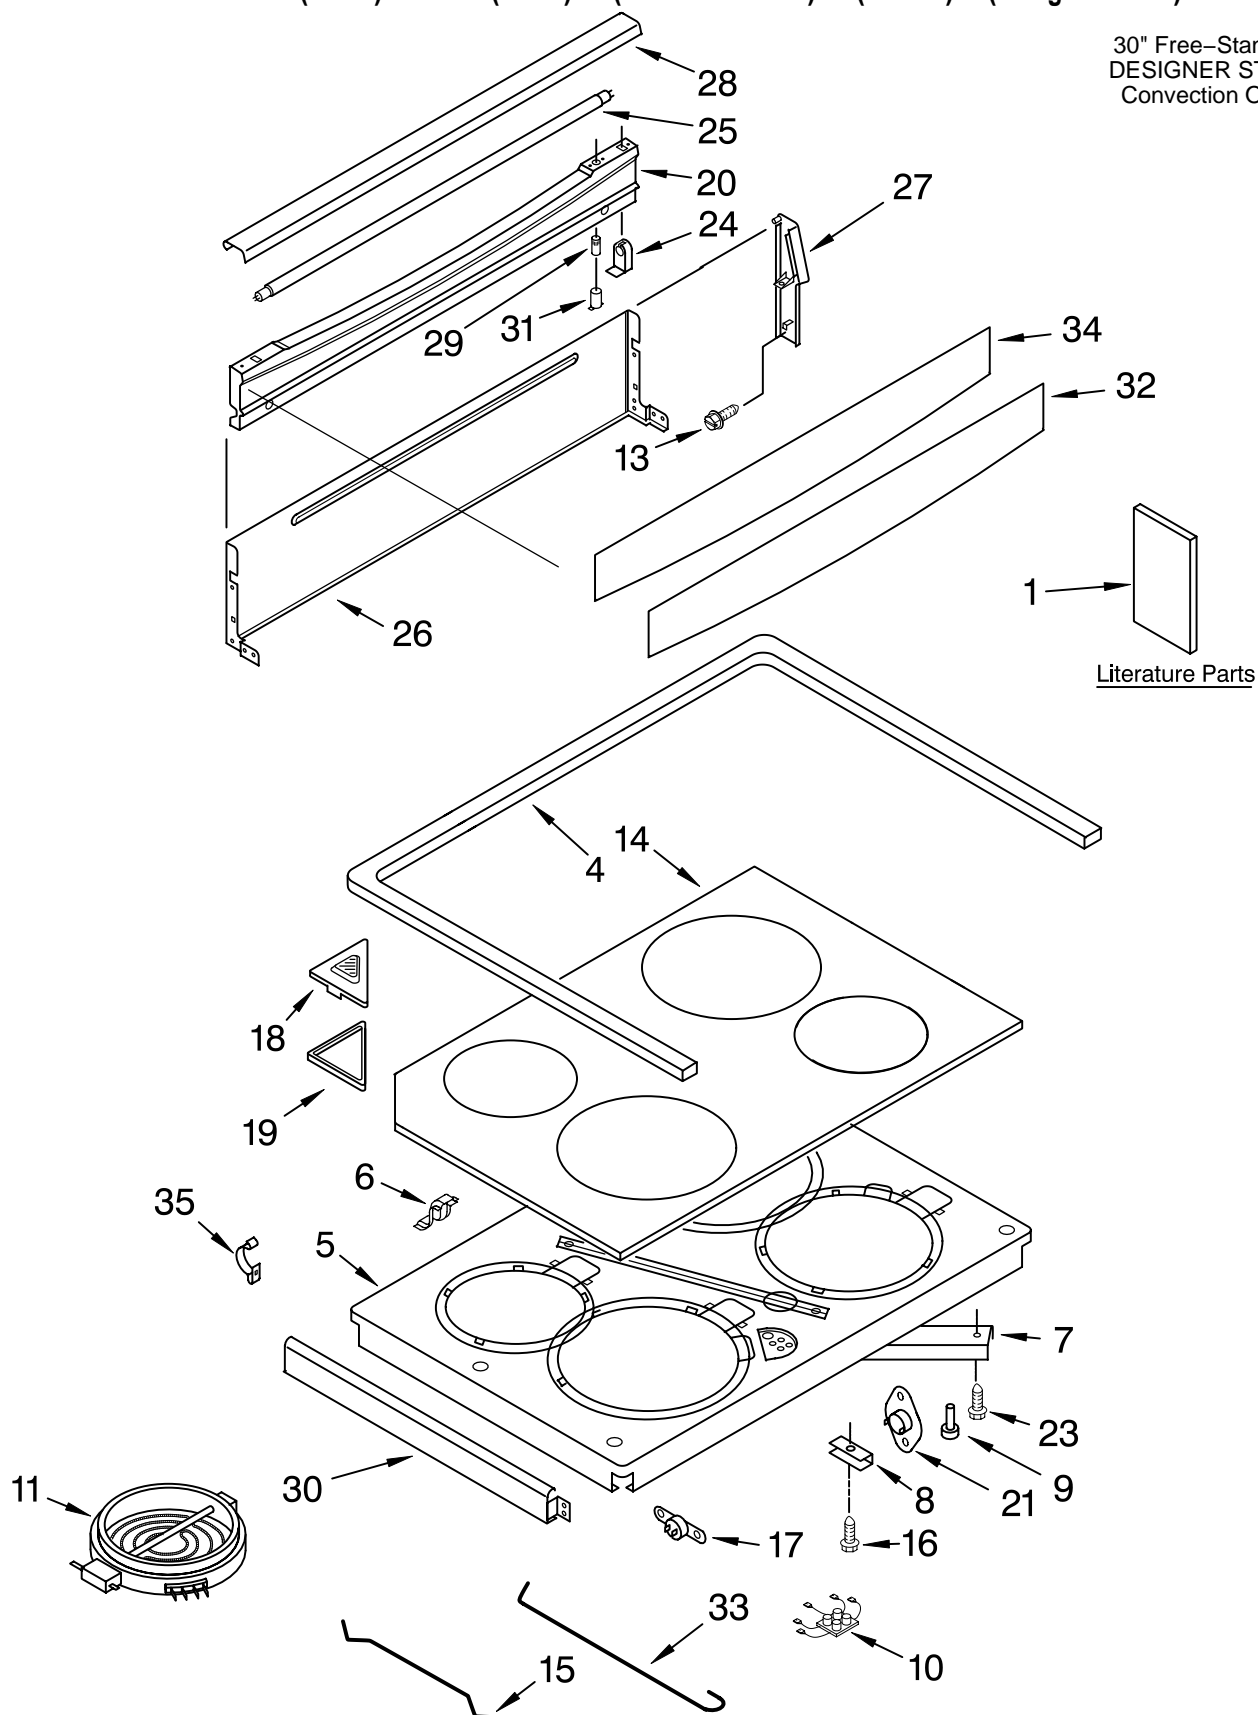

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS


For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	15	9781459	Rod, Large	28		Cover, Light
	LIT9752043	Installation Instructions			Ceran Element		9751327	White
	LIT9753846	Use & Care Guide	16	9751871	Screw		9751632	Black
	LIT4449066	Cookbook T/C Ovens	17	341196	Thermo Disc		9753320	Biscuit
	LIT9753027	Tech Sheet		9780265	Screw(4)	29	9781118	Starter
	LIT9753028	Wiring Diagram	18	9751800	Cover, Vent	30		Trim, Cooktop
	LIT9752686	Smart & Easy Guide	19	9751841	Gasket, Vent Cover			(Right Hand)
	LIT9752775	Template, Anti-Tip	20		Backsplash		9751275PW	White
	LIT3191638	Safer Cooking Tips		9781896GW	White		9751275PB	Black
4	9754102	Seal Foam		9781896GB	Black		9751275PC	Biscuit
	9781614	Gasket Cooktop		9781896GC	Biscuit			(Left Hand)
5	9752892	Support, Element	21	9751984	Bimetal		9751276PW	White
6	9751629	Bracket, Pivot	23	9780272	Screw		9751276PB	Black
	9752003	Washer, Pivot	24	9752760	Receptacle, Light		9751276PC	Biscuit
7	9781553	Brace, Support	25	422581	Lamp, Flourescent	31	9750866	Holder, Starter
8	9753691	Clip, Support (4)	26	9751664	Cover, Backsplash	32		Glass, Backsplash
9	9750969	Bumper, Rubber (4)	27		Endcap, Backsplash		9781154	White
10	9781936	Hot Light			(Right Hand)		9753292	Clear
11		Element, Surface		9781885FW	White	33	9781460	Rod, Small
	8272564	1500W – LR		9781885FB	Black			Ceran Element
	8272566	1800W – RF		9781885FC	Biscuit	34	9753291	Panel, Backguard
	9753997	2200W – RR			(Left Hand)			(Stainless)
	8272563	1000/2400W – LF		9781884FW	White	35	98997	Clip, Wire
13	9780265	Screw		9781884FB	Black			
14		Cooktop, Ceran		9781884FC	Biscuit			
	9753711CW	White						
	9753711CB	Black						
	9753711CC	Biscuit						
	9755005CW	Designer White						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

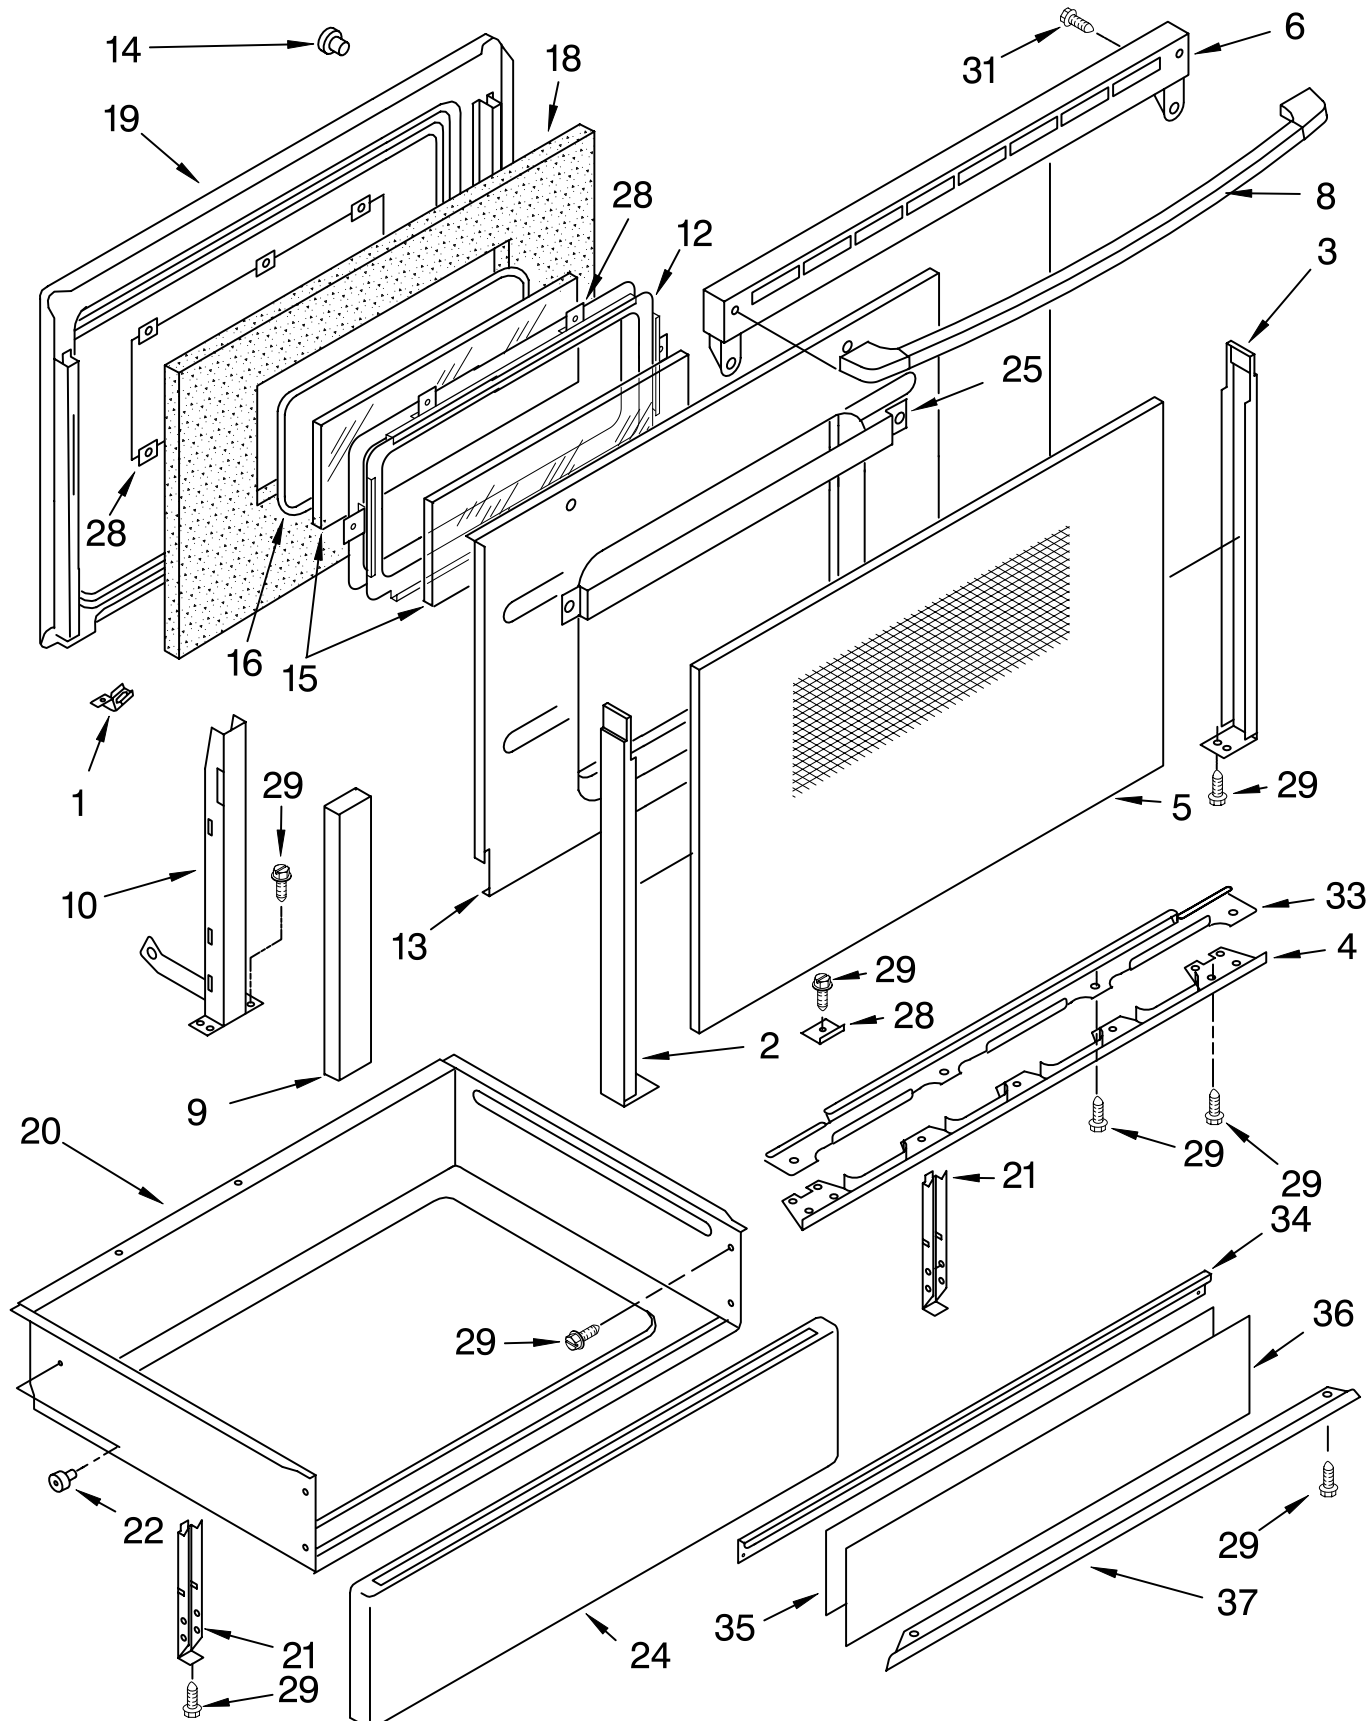

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9750676	Retainer, Glass	6		Vent, Door	20	9780583	Drawer & Roller
2		Trim, Door-Left	9753498GW		White		9750257	For BS Model
	9782003PW	White	9753498GT		Almond	21	9750169	Bracket, Drawer
	9782003PT	Almond	9753498GB		Black	22	423713	Support, Roller
	9782003PB	Black	9753498GC		Biscuit	24		Front, Drawer
	9782003PC	Biscuit	9781659		Gasket, Door Vent		9750168PW	White
3		Trim, Door-Right	9781490		Seal, Door		9750168PT	Almond
	9782004PW	White			Vent Side		9750168PB	Black
	9782004PT	Almond	8		Handle, Door		9750569PB	BS Model
	9782004PB	Black	9780523PW		White		9750168PC	Biscuit
	9782004PC	Biscuit	9780523PT		Almond	25	9750693	Heat Channel
4		Trim, Door Bottom	9780523PB		Black		90296	Clip
	9781209PW	White	9780523PC		Biscuit	28	9781502	Spacer, Door (8)
	9781209PT	Almond	9	9781449	Gasket, Door Glass (4)	29	9780265	Screw
	9781209PB	Black	10	9782033	Hinge, Door R or L	31	9781072	Screw
	9781209PC	Biscuit	12	9781602	Frame, Glass	33	9781771	Steam, Deflector
5		Glass, Door	13	9781586	Shield Door	34	9750614PB	Trim, Drawer-Top
	9781627PW	White	14	9780771	Bumper, Rubber	35	9753329	Spacer
	9781627PT	Almond	15	9781593	Glass, Pyro	36	9753293	Panel, Drawer (Stainless)
	9781627PB	Black	16	9781587	Seal, Glass	37	9750613PB	Trim, Drawer-Bot
	9754041	Stainless	18	9754006	Insulation			
	9781627PC	Biscuit	19	9781600GM	Liner, Door			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

This exploded view diagram illustrates the assembly of a refrigerator. The main components are labeled with numbers 1 through 37. The diagram shows the following parts and their assembly relationships:

- 1**: Refrigerator cabinet body.
- 2**: Refrigerator door.
- 3**: Ice storage bin.
- 4**: Ice storage bin liner.
- 5**: Ice storage bin gasket.
- 6**: Ice storage bin handle.
- 7**: Refrigerator door gasket.
- 8**: Door hinge bracket.
- 9**: Door hinge pin.
- 10**: Door hinge pin.
- 11**: Refrigerator door frame.
- 12**: Refrigerator door frame gasket.
- 13**: Refrigerator door frame gasket.
- 14**: Refrigerator door frame gasket.
- 15**: Refrigerator door frame gasket.
- 16**: Refrigerator door frame gasket.
- 17**: Refrigerator door frame gasket.
- 18**: Refrigerator door frame gasket.
- 19**: Refrigerator door frame gasket.
- 20**: Refrigerator door frame gasket.
- 21**: Refrigerator door frame gasket.
- 22**: Refrigerator door frame gasket.
- 23**: Refrigerator door frame gasket.
- 24**: Refrigerator door frame gasket.
- 25**: Refrigerator door frame gasket.
- 26**: Refrigerator door frame gasket.
- 27**: Refrigerator door frame gasket.
- 28**: Refrigerator door frame gasket.
- 29**: Refrigerator door frame gasket.
- 30**: Refrigerator door frame gasket.
- 31**: Refrigerator door frame gasket.
- 32**: Refrigerator door frame gasket.
- 33**: Refrigerator door frame gasket.
- 34**: Refrigerator door frame gasket.
- 35**: Refrigerator door frame gasket.
- 36**: Refrigerator door frame gasket.
- 37**: Refrigerator door frame gasket.

8168572


OVEN CHASSIS PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9754003	Insulation, Wrap
4	9754011	Insulation, Rear
5	9753744GM	Oven Liner
6	3191649	Gasket Oven
7		Side, Oven L or R
	9781907PW	White
	9781907PB	Black
	9781907PC	Biscuit
8	9780664	Shield, Insulation
9	9751789	Fan Duct, Side
11	9752637	Burner Box
13	9751653	Duct, Top
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Hinge, Door L or R
20	9781904	Support Rail, Pan
25	9753091	Vent, Tube
29	9781581	Door Switch
30	9751948	Relay, Dlb.
31	9780578	Button, Plug
33	9754009	Insulation, Side
35	9780265	Screw
36	9751808	Screw
37	9781509	Screw

OVEN PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

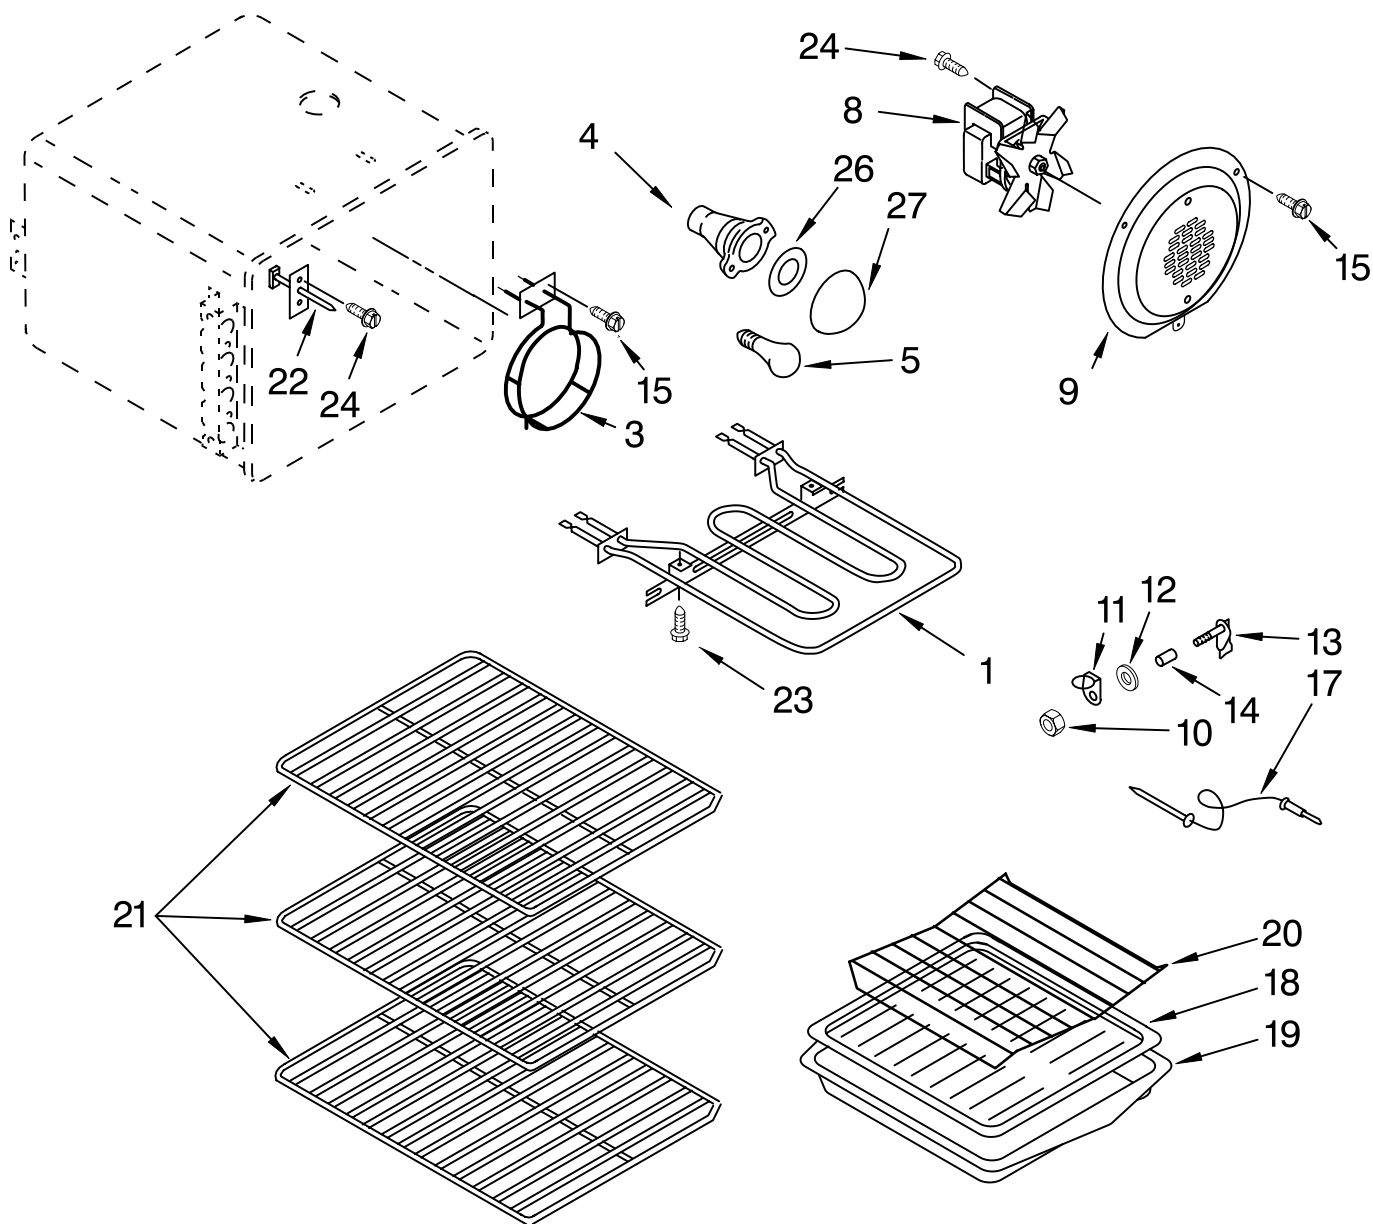

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
3	9751447	Element, Convection
4	9781050	Socket, Light
5	8935	Bulb, Oven
8	9781543	Assembly, Fan
9	9751904GM	Baffle, Convection
10	4167277	Lock-Nut, Cvr.Jack
11	4167266	Jack Cover


Illus. No.	Part No.	DESCRIPTION
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	9781509	Screw
17	3150144	Probe
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler

Illus. No.	Part No.	DESCRIPTION
20	9750827	Rack, Roasting
21	9750823	Rack, Standard
22	8053344	Sensor
23	340184	Screw
24	9780272	Screw
26	3184533	Gasket, Lens
27	9781049	Lens, Light

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR CHASSIS PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

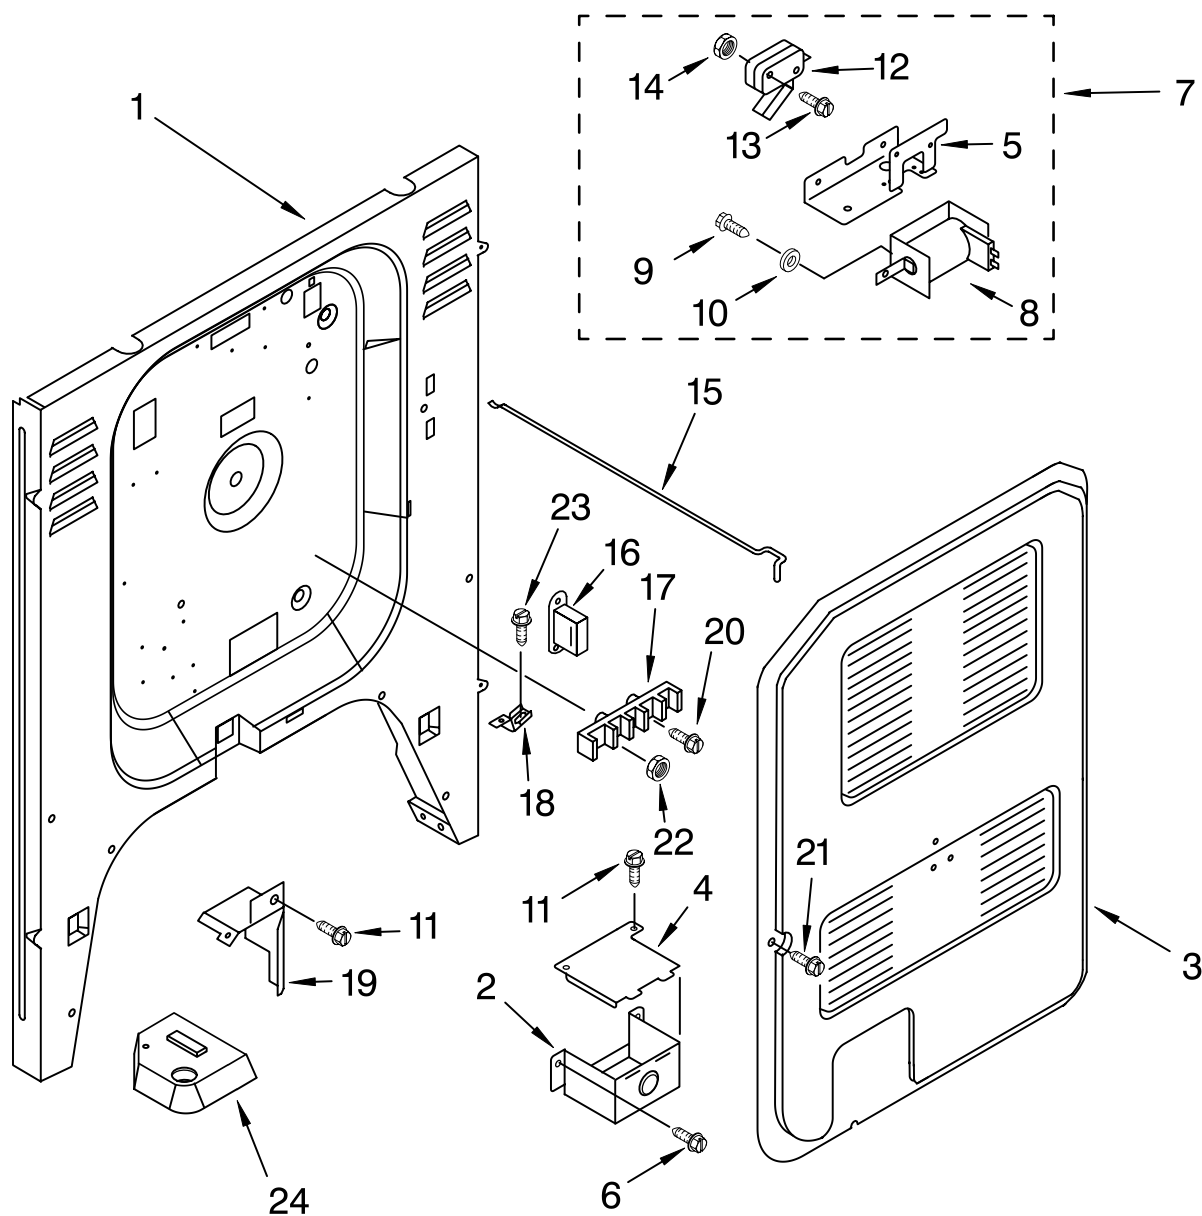

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back panel, Chassis
2	9752344	Box, Terminal
3	9751353	Panel, Rear Cover
4	9752345	Cover, Terminal Box
5	9751418	Bracket, Lock
6	9780272	Screw
7	9751439	Oven Lock Assembly
8	9751590	Solenoid
9	422222	Screw


Illus. No.	Part No.	DESCRIPTION
10	424238	Washer
11	9780265	Screw
12	9751763	Switch, Interloc
13	9750887	Screw
14	9750888	Nut
15	9750523	Rod, Lock
16	3191044	Ballast, Light
17	258076	Terminal Block

Illus. No.	Part No.	DESCRIPTION
18	3169573	Ground Strap
	313660	Clip, (1)
19	9751798	Vent Back, Oven
20	98884	Screw
21	423247	Screw
22	112432	Nut
23	690989	Screw, Grounding
24	9753413	Block, Balance

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

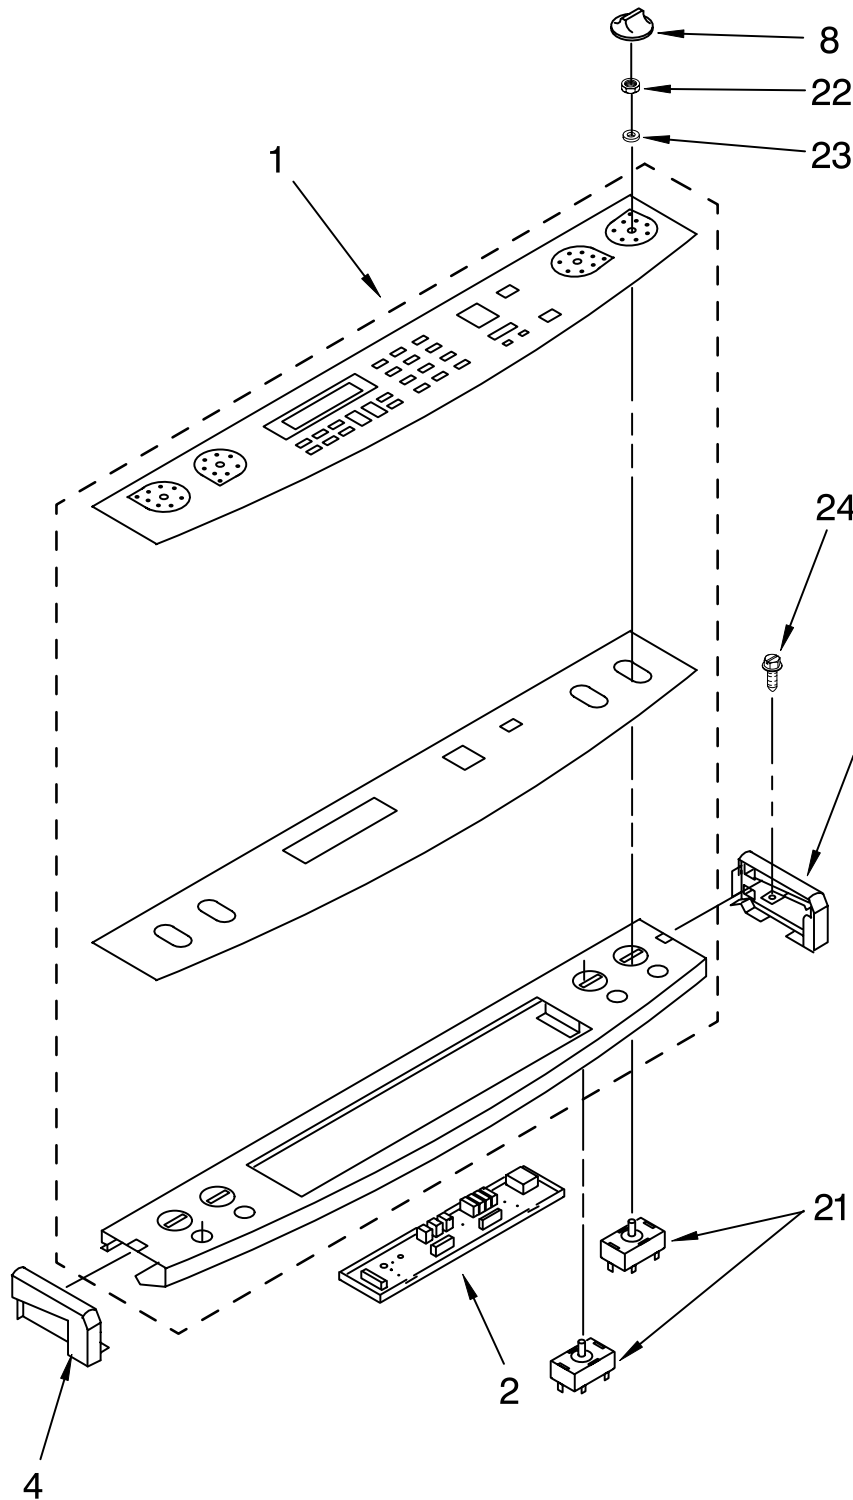


Illus. No.	Part No.	DESCRIPTION
1	9781971CW	Console, Glass White
	9781971CB	Black
	9781971CC	Biscuit
	9781977CB	Black Stainless
2	9781980	Timer, Electronic
	9780271	Screw, (2)
4		End Cap (Right Hand)
	9751280FW	White
	9751280FB	Black
	9751280FC	Biscuit (Left Hand)
	9751279FW	White
	9751279FB	Black
	9751279FC	Biscuit
	9781488	Spacer (2)
8		Knobs, Control
	9750372FW	White
	9750372FF	Black
	9750372FC	Biscuit
21		Switch, Infinite
	9751364	1500W – LR
	9751363	1800W – RF
	9751362	2200W – RR
	9751758	1000/2400W – LF
22		Nut, Mounting
	422617	Single Element
	9751711	Dual Element
23	9781455	Seal, Switch (4)
24	9780265	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HIDDEN BAKE PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

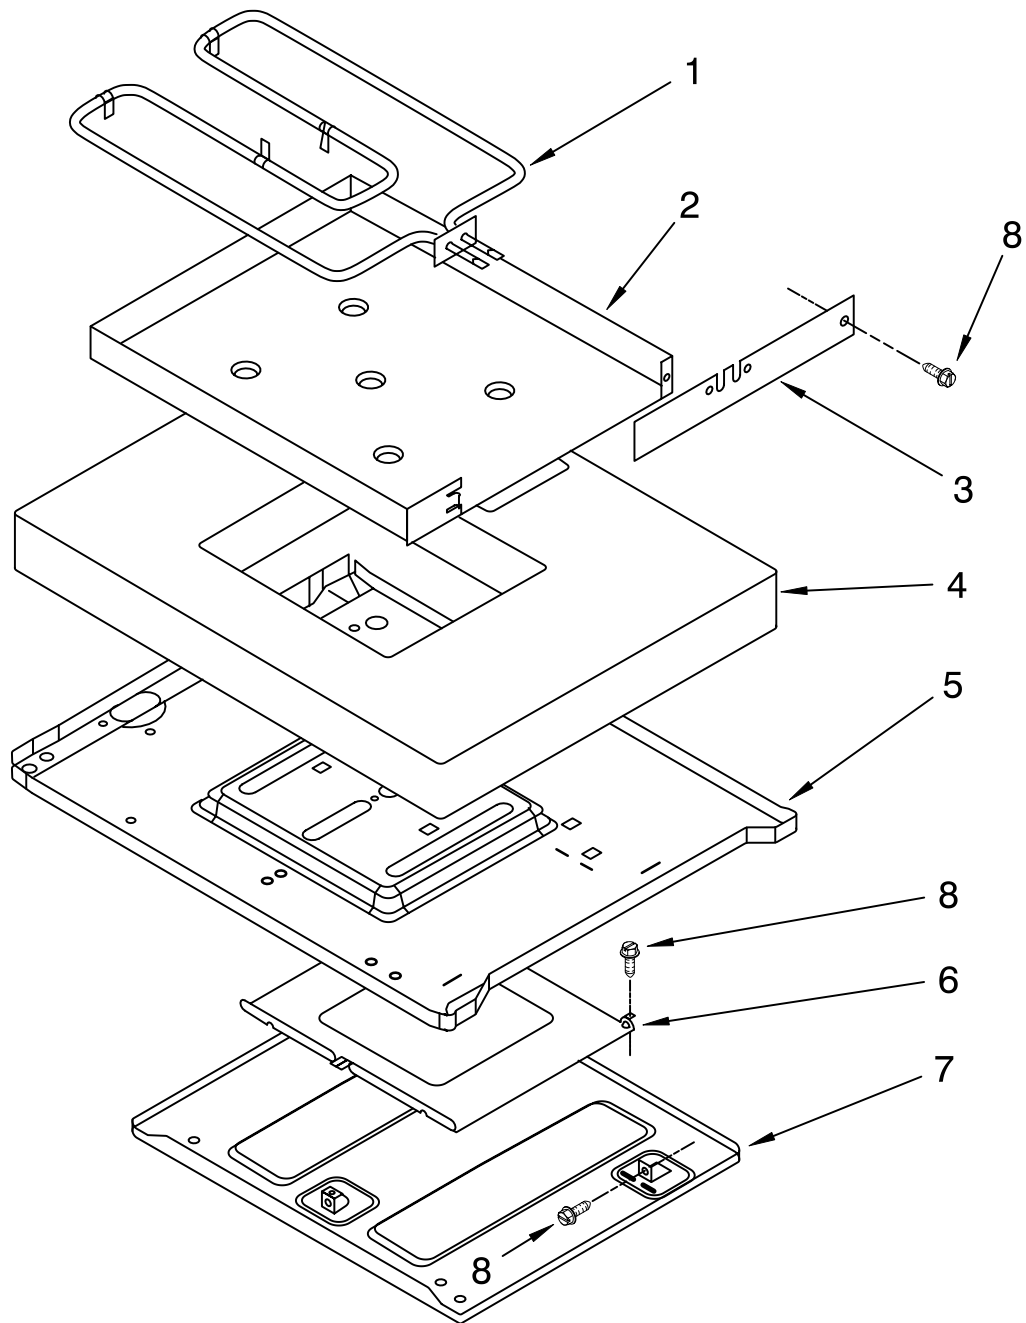

Illus. No.	Part No.	DESCRIPTION
1	9752294	Element, Bake
2	9782048	Pan, Hidden Bake
3	9782049	Cover, Hidden Bake
4	9754005	Insulation
5	9752735	Retainer, Insulation
6	9782050	Plate, Reflector
7	9782051	Shield
8	9780265	Screw, 10-16 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: KERC607HWH4, KERC607HBL4, KERC607HBS4, KERC607HBT4, KERC607HWW4
(White) (Black) (Black-Stainless) (Biscuit) (Designer White)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT. LENGTH</u>		
242828	Wire, Black	12 Ga. 150°c
242820	Wire, Black	14 Ga. 150°c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242829	Wire, Red	12 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242826	Wire, White	14 Ga. 150°c
242827	Wire, Yellow	14 Ga. 150°c
242832	Wire, Yellow	14 Ga. 200°c
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
72017	White	
72107	Almond	
72109	New Avocado	
72108	Coffee	
72110	Harvest Gold	
**511873	White Porcelain	(2 Oz.)
4392899	Biscuit	

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, PRESSURIZED SPRAY (12 oz.)</u>		
350930	White	
350956	Almond	
261888	New Avocado	
261886	Coffee	
261890	Harvest Gold	
285006	Superior Black	
206922	Primer (White)	
4392901	Biscuit	
<u>PAINT, BULK (1 qt.)</u>		
799344	White (Uncut)	
978883	Almond (Uncut)	
261891	Harvest Gold (Uncut)	
4392900	Biscuit (Uncut)	
<u>REFINISHING MATERIAL</u>		
799832	Kit, Porcelain Repair (White)	
242756	Touch-Up Self-Clean (1/2 Pt.)	
<u>INSULATION</u>		
9754003	Insulation, Wrap	
9754011	Insulation, Rear	

Illus. No.	Part No.	DESCRIPTION
<u>CLEANER, COOKTOP</u>		
9780196	Glass Cleaner	
<u>ANTI-TIP KIT</u>		
9751745	Anti-Tip Kit	
<u>WIRING HARNESS PARTS</u>		
9753944	Harness, Wire (Main Harness)	
9781767	Harness, Wire (Control, Ceran)	
9781769	Harness, Wire (Console)	
9753943	Harness, Wire (Main Harness) (For BS Model)	
9781932	Harness, Wire (Cooktop)	
9750376	Harness, Wire (Oven Door)	
9753374	Harness, Wire (Dual Oven Light)	
9753683	Harness, Wire (Hidden Bake)	
90016	Clip, Wire	
9781656	L2 - Electric	
9751868	Grommet, Harness	
9751139	Harness, Wire (Meat Probe)	
20082084	Tie, Wire	
9751750	Harness, Wire (Top Light)	
690989	Screw, Ground	
3196520	Clip, Wire	

* * **NOTE:** The spray paint is Porcelain; All Other Panels are Painted Surfaces.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST